



Raven's Coffee Machine

Turning Machine ON/OFF

The machine can be turned on or off using the power button located top rear of the machine




IMPORTANT







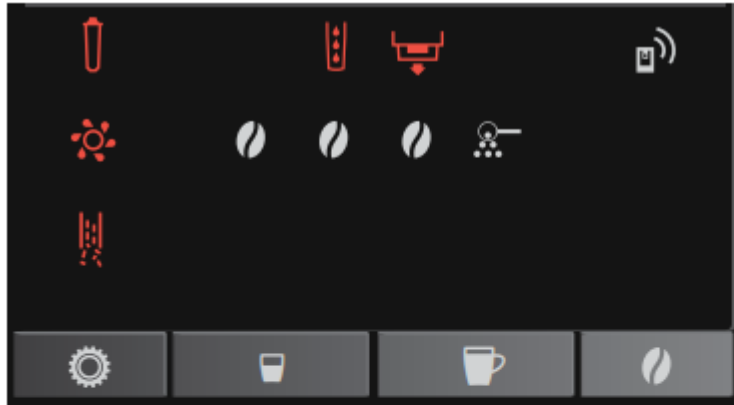





Makes a cup is placed below the output, the machine will rinse before being powered on or off!



Symbols






Symbol display and buttons


	Programming mode button		Water Tank symbol
	'Small cup' button		Drip tray symbol
	'Large cup' button		WiFi symbol
	Coffee strength button		Coffee Strength symbol
	Descaling symbol		Ground Coffee symbol
	Cleaning symbol		
	Filter symbol		

 'Small cup' button
- This indicates espresso


 'Large cup' button
- This indicates traditional drip coffee


Operation

1. Remove purge cup
2. Select strength level 
3. Select style (espresso or coffee)  / 
 1. Multiple presses of the style button will produce multiple drinks
4. Wait
5. Replace purge cup

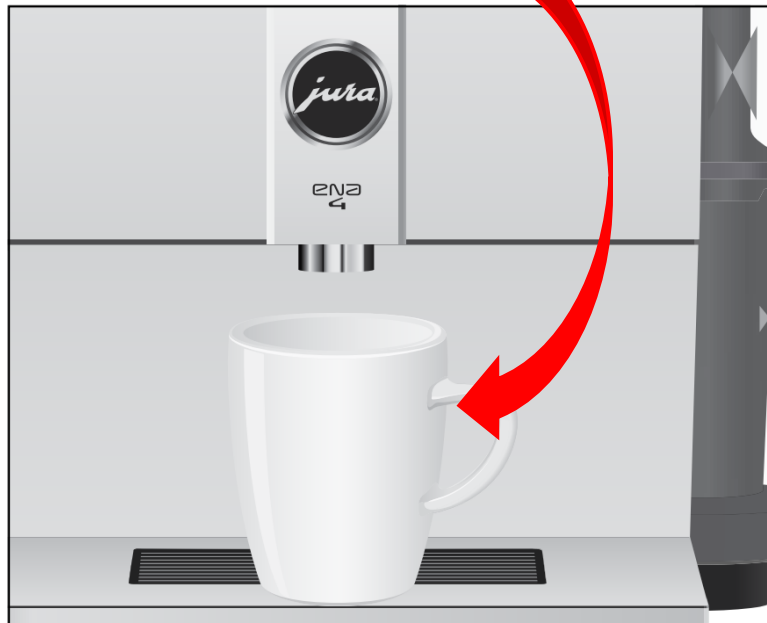



FOR GROUND COFFEE:

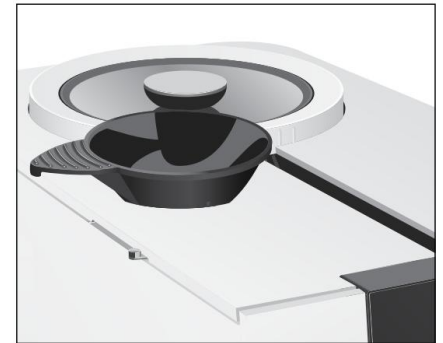1. Remove purge cup
2. Select strength level button until setting is 
3. Open powder chute and add grounds via funnel
4. Remove funnel and close chute
5. Select style
6. Wait
7. Replace purge cup



Troubleshooting

Problem	Cause/Result	Action
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system.	▸ Set the grinder to a coarser setting (see chapter 4 'Preparation – Adjusting the grinder').
	The water hardness may not have been correctly set.	▸ Perform descaling (see chapter 7 'Maintenance – Descaling the machine ').
There is dry ground coffee behind the coffee grounds container.	The beans used are resulting in an above-average volume of ground coffee.	▸ Reduce the coffee strength or choose a finer grinder setting.
Grinder is making a very loud noise.	There are foreign objects in the grinder.	▸ Contact customer support in your country (see chapter 13 'JURA contact details / Legal information').
The  symbol or the  symbol lights up brightly and other symbols flash.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons. The ENA switches off automatically.	▸ Warm the machine at room temperature.